

FlightGear Keyboard Bindings

- Ctrl-A (1) Toggle autopilot altitude lock; **b1900d**: Toggle autopilot; **747-200|Boeing314A|Concorde|Lockheed1049|h4-hercules-jsbsim|h4-hercules-yasim**: Toggle autopilot altitude lock
- Ctrl-B (2) Toggle speedbrake; **lightning**: Airbrakes; **Lockheed1049**: Propeller reverse; **A6M2|A6M2b|Ki-84|beaufighter|f4u|hurricane|b|p51d**: Toggle engine boost; **seafire|llc|spitfire|lla**: Toggle engine boost control cutout; **a4f|hunter|hunter-2tanks|sea-vixen|seahawk**: Toggle speedbrake; **Concorde**: reverse thrust
- Ctrl-C (3) Toggle clickable panel hotspots
- Ctrl-D (4) **747-200|Concorde**: Disconnect autopilot; **hurricane|llb|seafire|llc|spitfire|lla**: Door Fold Toggle; **B-2|b29|b29-jsbsim|b29-magic|b29-yasim**: Open/close bomb bay doors; **A6M2|A6M2b|Ki-84|j7w**: Open/close canopy; **as350|bell206|bo105|c150|ch47|ch47-yasim**: Open/close selected door; **bf109g**: drop Tank
- Ctrl-E (5) **Concorde**: Toggle engineer view; **Boeing314A|Lockheed1049|h4-hercules-jsbsim|h4-hercules-yasim**: Toggle engineer/captain view; **bf109g**: drop Center Load
- Ctrl-F (6) **hunter|hunter-2tanks|sea-vixen|seahawk**: Emergency Flap Lowering; **b29|b29-jsbsim|b29-magic|b29-yasim**: Open/close cabin doors and windows; **Concorde**: Reheat; **hurricane|llb|seafire|llc**: Toggle Wingfold; **f16|f16-3d|f16-mlu|f16at**: Trigger flare release
- Ctrl-G (7) Toggle autopilot glide slope lock; **747-200|Concorde**: Toggle autopilot glide slope lock; **beaufighter**: Toggle gunsight stow
- Ctrl-H (8) Toggle autopilot heading lock; **ufo**: Remove selected object; **f16|f16-3d|f16-mlu|f16at**: Toggle arrester hook; **747-200|Boeing314A|Concorde|Lockheed1049|h4-hercules-jsbsim|h4-hercules-yasim**: Toggle autopilot heading lock
- Ctrl-I/Tab (9) Show instrument setting dialog; **OV10_USAFE**: Menu Dialog; **A-10|OV10_NASA|as350|bell206|bo105|c150|ch47|ch47-yasim|lightning|vulcanb2**: Show configuration dialog; **ufo**: Show object adjustment dialog
- Ctrl-J (10) **a4f**: Deploy drag chute; **B-2|hunter-2tanks**: Jettison Inner and Outer Pylon Stores; **Boeing314A|Concorde|Lockheed1049|h4-hercules-jsbsim|h4-hercules-yasim**: Toggle copilot view; **lightning**: Ventral tank jettison
- Ctrl-K (11) **SU-37**: AM; **Concorde|Lockheed1049**: Toggle observer view; **a4f**: Toggle spoiler; **Boeing314A|h4-hercules-jsbsim|h4-hercules-yasim**: Toggle star view
- Ctrl-L (12) **hunter-2tanks**: Seat Default; **A6M2|A6M2b|Ki-84|beaufighter|bf109g|f4u|hurricane|llb|ju52|mosquito|seafire|llc**: Toggle Tailwheel Lock
- Ctrl-M/Enter (13) Move rudder right; **747-200|Concorde|Lockheed1049**: Menu
- Ctrl-N (14) Toggle autopilot nav1 lock; **747-200|Concorde**: Toggle autopilot nav1 lock; **Lockheed1049**: Toggle navigator view
- Ctrl-O (15) **bocian**: Find aircraft for aerotow; **Concorde**: Toggle overhead view; **Boeing314A|Lockheed1049|h4-hercules-jsbsim|h4-hercules-yasim**: Toggle radio view
- Ctrl-P (16) Toggle pitch hold; **pa24-250**: Toggle Prime Pump; **747-200**: Toggle autopilot pitch hold (disabled); **Boeing314A|Concorde|Lockheed1049|h4-hercules-jsbsim|h4-hercules-yasim**: Toggle pitch hold
- Ctrl-Q (17)
- Ctrl-R (18) Show radio setting dialog; **747-200|Lockheed1049**: Radio dialog; **Concorde**: Radio dialog **SHIFT**: Toggle crew text
- Ctrl-S (19) Toggle auto-throttle lock; **Lockheed1049**: Toggle auto-throttle; **747-200|Boeing314A|Concorde|h4-hercules-jsbsim|h4-hercules-yasim|sea-vixen**: Toggle auto-throttle lock
- Ctrl-T (20) Toggle autopilot terrain lock; **Concorde**: Toggle altitude hold; **747-200**: Toggle autopilot altitude hold
- Ctrl-U (21) [Cheat] Add 1000ft of emergency altitude; **hunter|hurricane|llb|sea-vixen|seafire|llc|seahawk|spitfire|lla**: Seat Default
- Ctrl-V (22) Select initial view (view 0); **747-200|Boeing314A|Concorde|Lockheed1049|h4-hercules-jsbsim|h4-hercules-yasim**: Select initial view (view 0)
- Ctrl-W (23) Toggle autopilot wing leveler; **bocian**: Place Winch 1000m in front of aircraft; **dhc2F**: Throw anchor; **747-200**: Toggle autopilot wing-lever (disabled); **Concorde**: Toggle steward view

Ctrl-X	(24)	Reset zoom to default; Concorde: SHIFT: Reset floating view; 747-200 Lockheed1049: SHIFT: Restore floating view
Ctrl-Y	(25)	as350 bell206 bo105 ch47 ch47-yasim: Show material dialogs; SU-37: Toggle auto-flaps, slats and reheat
Ctrl-Z	(26)	B-52F: Steer Right; SU-37: Toggle auto-speedbrake; Concorde: Toggle virtual crew
Esc	(27)	Prompt and quit FlightGear; SHIFT: Reset FlightGear
Ctrl-4/Ctrl-\	(28)	B-52F: Steer Left; SU-37: Toggle stick mode
Ctrl-5/Ctrl-]	(29)	
Ctrl-6	(30)	
Ctrl-7/Ctrl-/	(31)	
Space	(32)	Fire Starter on Selected Engine(s); bf109g: 1; hurricanellb seafirellc spitfirella: Coffman Starter; lightning: Radar View; OV10_CDF OV10_NASA OV10_USAFE: Release munitions at selected station; an2: Show help about starter; ufo: Show model select dialog; dhc2F dhc2W: Starter; pa24-250: Toggle Starter Switch
!	(33)	Select first engine; dhc2F dhc2W: Toggle Battery Switch; pa24-250: Toggle Master Switch
"	(34)	
#	(35)	Select third engine; dhc2F dhc2W: Toggle Fuel Pump; pa24-250: Toggle Nav Lights
\$	(36)	Select fourth engine; dhc2F: Toggle Carb Heat; pa24-250: Toggle Landing Light; dhc2W: Toggle Pitot Heat
%	(37)	dhc2F dhc2W: Toggle Landing Light; pa24-250: Toggle Turn+Bank
&	(38)	
' (Apostrophe)	(39)	Display a dialog relevant to the tuned in ATC service (if any)
((40)	hurricanellb: Fuel Cock Close; seafirellc spitfirella: Fuel Cock Left Toggle; pa24-250: Toggle Strobe Lights
)	(41)	hurricanellb: Fuel Cock Open; seafirellc spitfirella: Fuel Cock Right Toggle; pa24-250: Toggle Avionics Master
*	(42)	pa24-250: Toggle Pitot Heat
+	(43)	Let ATC/instructor repeat last message
, (Comma)	(44)	Left brake
- (Minus)	(45)	
. (Period)	(46)	Right brake
/	(47)	
0	(48)	Move rudder left
1	(49)	Decrease elevator trim; SHIFT: Look back left
2	(50)	Increase elevator or autopilot altitude; SHIFT: Look back
3	(51)	Decrease throttle or autopilot autothrottle; SHIFT: Look back right
4	(52)	Move aileron left (or adjust AP heading.); SHIFT: Look left
5	(53)	Center aileron, elevator, and rudder
6	(54)	Move aileron right (or adjust AP heading.); SHIFT: Look right
7	(55)	Increase elevator trim; SHIFT: Look front left
8	(56)	Decrease elevator or autopilot altitude; SHIFT: Look forward
9	(57)	Increase throttle or autopilot autothrottle; SHIFT: Look front right
:(Colon)	(58)	
;(Semicolon)	(59)	hurricanellb seafirellc spitfirella: Rudder Trim Left
<	(60)	
=	(61)	hurricanellb seafirellc spitfirella: Rudder Trim Right
>	(62)	
?	(63)	Show help dialog
@	(64)	Select second engine; dhc2F dhc2W: Toggle Alternator Switch; pa24-250: Toggle Fuel Pump
A	(65)	Decrease speed-up
B	(66)	Toggle parking brake on or off; Boeing314A: Toggle parking brake (rope) on or off
C	(67)	A-6E A6M2 A6M2b Ki-84 a4 a4f carrier hunter hurricanellb sea-vixen seafirellc seahawk: Catapult Launch Command; spitfirella: Coffman Starter Cartridge Indexer; CanberraB18 MiG-15bis bf109g f4u: Toggle Canopy; vulcanb2: Toggle Chute; beaufighter: Toggle Cockpit door; ju52: Toggle Passenger-Door; A-10: Toggle canopy on or off
D	(68)	j7w: Decrease Hydraulic Torque Converter Pressure; hurricanellb seafirellc spitfirella: Door

- Fold Down; **c130|do335-yasim|me262|uh60**: Passenger door; **as350|bell206|bo105|c150|ch47|ch47-yasim**: Select previous door; **CanberraB18|vulcanb2**: Toggle Bomb Bay Doors; **bf109g**: Toggle Canopy; **f4u**: Toggle Cowl Flaps; **ju52**: Toggle Front-Door; **mosquito**: Toggle Radiator Shutters; **beaufighter**: Toggle Rear-Door; **an2**: Toggle door
- E (69) **j7w**: Aileron trim right; **Boeing314A|Lockheed1049|h4-hercules-jsbsim|h4-hercules-yasim**: Decrease propeller pitch; **CanberraB18|vulcanb2**: Toggle Entrance Hatch; **bf109g**: fire engine Cannon; **A300|A320-111|A320-131|A380**: steer NLG right
- F (70) **hurricanellb|seafirellc**: Close Canopy; **X15-new**: Close speed brakes; **j7w**: Decrease Water Methanol Injection; **spitfirella**: Open Canopy; **mosquito**: Toggle Front-Door; **A-6E|A6M2|A6M2b|Ki-84|a4|a4f|carrier|seahawk**: Wing Fold Down; **hunter|hunter-2tanks|sea-vixen**: Wing Fold Down/Canopy Close; **beaufighter**: starboard fuel tank select
- G (71) Gear down
- H (72) Cycle HUD Brightness; **beaufighter**: Fire Rockets; **bf109g**: Fire WGr 21; **seahawk**: Null; **hurricanellb|seafirellc|spitfirella**: Radiator Flap down
- I (73) Switch to and toggle alternative HUD types; **hurricanellb|seafirellc|spitfirella**: Operate Priming Pump
- J (74) **vulcanb2**: Fire weaponry; **hunter-2tanks**: Jettison Outer Pylon Stores; **a4f**: Jettison drag chute; **CanberraB18**: Release Red Beard; **beaufighter**: Release Torpedo
- K (75) **hurricanellb|seafirellc|spitfirella**: Gear Warn Toggle; **A-10|AN-225|B-52F|BAC-TSR2|CanberraB18|ComperSwift|MiG-15bis|SU-37|TU-114**: Toggle trajectory markers
- L (76) **c182rg**: Cockpit Illumination; **c182|c182-2dpanel**: Cockpit illumination; **A-6E|A6M2|A6M2b|Ki-84|a4|a4f|carrier|hunter|hurricanellb|sea-vixen|seafirellc|seahawk**: Launch-bar engage; **hunter-2tanks**: Seat Up; **TU-114**: Update Tower View position
- M (77) Mixture leaner; **seafirellc|spitfirella**: Mixture Weak; **beaufighter|bf109g|f4u**: Toggle Master Arm off
- N (78) Propeller Coarser; **as350|bell206|bo105|ch47|ch47-yasim**: Toggle rotor brake
- O (79) **f4u**: Hook Up; **A-6E|A6M2|A6M2b|Ki-84|a4|a4f|carrier|hunter|hunter-2tanks|hurricanellb|sea-vixen|seafirellc|seahawk**: Hook down; **bocian|dhc2W|j3cub|s76c**: Open aerotow hook; **c150**: Operate Priming Pump; **B-2**: hatch.open/close
- P (80) Toggle panel; **bo105**: Null
- Q (81) **F80C|T38**: Fuel Cutoff Switch or Lever; **A300|A320-111|A320-131|A380**: steer NLG left
- R (82) **X15-new**: Open speed brakes; **lightning**: Radar View; **A320|MD11|MD11-FINNAIR|MD11-KLM**: Toggle cutoff on Selected Engine(s); **fokker100|fokker70**: Toggle thrust reverser
- S (83) **A320|MD11|MD11-FINNAIR|MD11-KLM**: Fire Starter on Selected Engine(s); **OV10_CDF|OV10_NASA|OV10_USAFE|c130**: Start smoke; **beaufighter**: Toggle Front-Door; **fokker100|fokker70**: Toggle spoilers
- T (84) Decrease warp delta
- U (85) **hunter|hurricanellb|lightning|sea-vixen|seafirellc|seahawk|spitfirella**: Seat Down; **A-10|AN-225|B-52F|BAC-TSR2|CanberraB18|ComperSwift|MiG-15bis|SU-37|TU-114**: Update Drop View position
- V (86) Scroll in reverse through views; **747-200|Boeing314A|Concorde|Lockheed1049|h4-hercules-jsbsim|h4-hercules-yasim**: Scroll in reverse through views
- W (87) Decrease warp; **bocian**: Toggle winch hook; **dhc2F**: release anchor
- X (88) Increase field of view
- Y (89) **as350|bell206|bo105|ch47|ch47-yasim**: Select previous variant; **c182rg**: Toggle Yoke visibility; **c182|c182-2dpanel**: Toggle yoke visibility
- Z (90) Decrease Visibility
- [(91) Decrease flaps; **ComperSwift**: Adjust view left; **sea-vixen**: Decrease flap lever; **A300|A380|fokker100|fokker50|fokker70|hunter|hunter-2tanks|seahawk**: Decrease flaps; **seafirellc|spitfirella**: Flap Lever up; **B-52F**: Reduce Flaps
- \ (92)
-] (93) Increase flaps; **ComperSwift**: Adjust view right; **seafirellc|spitfirella**: Flap Lever down; **B-52F**: Increase Flaps; **sea-vixen**: Increase flap lever; **A300|A380|fokker100|fokker50|fokker70|hunter|hunter-2tanks|seahawk**: Increase flaps

- ^ (94) **dhc2F|dhc2W**: Toggle Nav Lights; **pa24-250**: Toggle Rotating Beacon
- _ (Underscore) (95)
- ` (Backtick) (96)
- a (97) Increase speed-up; **an2**: aileron trim left
- b (98) Apply all brakes; **Boeing314A**: Apply all brakes (rope)
- c (99) Toggle 3D/2D cockpit
- d (100) **c130|do335-yasim|me262|uh60**: Crew door; **lightning**: Deploy braking chute; **hurricanellb|seafirellc|spitfirella**: Door Fold Up; **ufo**: Dump coordinates; **j7w**: Increase Hydraulic Torque Converter Pressure; **A-10|AN-225|NTPS|NTPS-Eng|NTPS-HD1|NTPS-HD2|NTPS-OTW-HUD|NTPS-OTW-NOHUD|SU-37|YF-23**: Retract Slats; **as350|bell206|bo105|c150|ch47|ch47-yasim**: Select next door; **an2**: aileron trim right
- e (101) **j7w**: Aileron trim left; **ufo**: Export object data XML file; **beaufighter**: Fire Cannons; **A-10**: Fire GAU-8/A cannon; **bf109g|f4u**: Fire MG; **MiG-15bis**: Fire cannons; **Boeing314A|Lockheed1049|h4-hercules-jsbsim|h4-hercules-yasim**: Increase propeller pitch; **OV10_USAFE**: eject; **A300|A320-111|A320-131|A380**: steer NLG right
- f (102) **hurricanellb|seafirellc|spitfirella**: Close Canopy; **A-10|AN-225|NTPS|NTPS-Eng|NTPS-HD1|NTPS-HD2|NTPS-OTW-HUD|NTPS-OTW-NOHUD|SU-37|YF-23**: Extend Slats; **j7w**: Increase Water Methanol Injection; **A-6E|A6M2|A6M2b|Ki-84|a4|a4f|carrier|seahawk**: Wing Fold Up; **hunter|hunter-2tanks|sea-vixen**: Wing Fold Up/Canopy Open; **bf109g|dhc2F|dhc2W|pa24-250**: fuel tank select; **Concorde|Lockheed1049**: full cockpit; **beaufighter**: port fuel tank select
- g (103) Gear Up
- h (104) HUD Master Switch; **seahawk**: Null; **hurricanellb|seafirellc|spitfirella**: Radiator Flap Up; **pa24-250**: Toggle Carb Heat; **harrier**: toggle HUD
- i (105) Normal HUD
- j (106) Decrease spoilers; **747-200**: Decrease spoilers; **hunter-2tanks**: Jettison Inner Pylon Stores; **c130**: Jump signal; **b29|b29-jsbsim|b29-magic|b29-yasim**: Jump to next seat; **a4f**: Repack drag chute; **OV10_USAFE**: jump signal; **ju52**: jumpers
- k (107) Increase spoilers; **hurricanellb|seafirellc|spitfirella**: Gear Warn Toggle; **747-200**: Increase spoilers; **hunter|hunter-2tanks|sea-vixen|seahawk**: Null
- l (108) Toggle tail-wheel lock; **seahawk**: Null; **hunter-2tanks**: Seat Down; **bf109g|ec135|lightning**: Show livery select dialog; **dhc2F**: Toggle water rudders
- m (109) Mixture richer; **seafirellc|spitfirella**: Mixture Rich; **ufo**: Toggle "active object" marker; **beaufighter|bf109g|f4u**: Toggle Master Arm on
- n (110) Propeller Finer; **as350|bell206|bo105|ch47|ch47-yasim**: Apply rotor brake
- o (111) **A-6E|A6M2|A6M2b|Ki-84|a4|a4f|carrier|hunter|hunter-2tanks|sea-vixen|seahawk**: Hook Up; **f4u**: Hook down; **bocian|dhc2W|j3cub|s76c**: Lock aerotow hook; **B-2**: fuelhatch.open/close
- p (112) Toggle the pause state of the sim
- q (113) **Concorde**: quit speed-up; **747-200|Boeing314A|Lockheed1049|h4-hercules-jsbsim|h4-hercules-yasim**: reset speed-up; **A300|A320-111|A320-131|A380**: steer NLG left
- r (114) Activate the instant replay system; **lightning**: Activate the instant replay system
- s (115) Swap panels; **bo105**: Null; **OV10_CDF|OV10_NASA|OV10_USAFE**: Start smoke; **c130**: Stop smoke
- t (116) Increase warp delta
- u (117) **hunter|hurricanellb|lightning|sea-vixen|seafirellc|seahawk|spitfirella**: Seat Up
- v (118) Scroll through views; **747-200|Boeing314A|Concorde|Lockheed1049|h4-hercules-jsbsim|h4-hercules-yasim**: Scroll through views; **as350|bell206|ch47|ch47-yasim**: Toggle dynamic cockpit view
- w (119) Increase warp; **bocian**: Increase winch speed
- x (120) Decrease field of view
- y (121) **an2**: Change livreas; **as350|bell206|bo105|ch47|ch47-yasim**: Select next variant; **b1900d**: Toggle yokes
- z (122) Increase Visibility
- { (123) Decrease Magneto on Selected Engine; **hurricanellb|seafirellc|sopwithCamel-YASim|spitfirella**: Mag Switch Left Toggle; **as350|bell206|bo105|ch47|ch47-yasim|s76c**: Shutdown Engines

\	(124)	
}	(125)	Increase Magneto on Selected Engine; hurricanellb seafirellc sopwithCamel-YASim spitfirella : Mag Switch Right Toggle; as350 bell206 bo105 ch47 ch47-yasim s76c : Start Engines
~	(126)	Select all engines
Ctrl-8	(127)	787 Bravo Citation-II CitationX : Toggle Reversers
F1	(257)	SHIFT : Load flight
F2	(258)	Force tile cache reload; SHIFT : Save flight
F3	(259)	Capture screen; SHIFT : Load panel
F4	(260)	Force lighting update; SHIFT : Reload global preferences
F5	(261)	SHIFT : Scroll panel down
F6	(262)	Toggle Autopilot Heading Mode; SHIFT : Scroll panel up
F7	(263)	SHIFT : Scroll panel left
F8	(264)	Cycle fog type; SHIFT : Scroll panel right
F9	(265)	Toggle textures; SHIFT : Toggle FDM data logging
F10	(266)	Toggle menubar; SHIFT : Switch to next GUI style
F11	(267)	Pop up autopilot dialog
F12	(268)	
Enter	(269)	Move rudder right
Keypad 5	(309)	Center aileron, elevator, and rudder
Left	(356)	Move aileron left (or adjust AP heading.); SHIFT : Look left; ufo : Move aileron left (or adjust AP heading.) SHIFT : Look left; 747-200 Concorde Lockheed1049 : Move aileron left or adjust AP heading or move floating view left
Up	(357)	Increase elevator or autopilot altitude; SHIFT : Look forward; ufo : Increase elevator or autopilot altitude SHIFT : Look forward; Concorde : Increase elevator or autopilot altitude or move floating view front; Boeing314A h4-hercules-jsbsim h4-hercules-yasim : Increase elevator or autopilot pitch; Lockheed1049 : Increase elevator or autopilot pitch or move floating view front; 747-200 : Increase elevator or move floating view front
Right	(358)	Move aileron right (or adjust AP heading.); SHIFT : Look right; ufo : Move aileron right (or adjust AP heading.) SHIFT : Look right; 747-200 Concorde Lockheed1049 : Move aileron right or adjust AP heading or move floating view right
Down	(359)	Decrease elevator or autopilot altitude; SHIFT : Look backwards; ufo : Decrease elevator or autopilot altitude SHIFT : Look backwards; Concorde : Decrease elevator or autopilot altitude or move floating view aft; Boeing314A h4-hercules-jsbsim h4-hercules-yasim : Decrease elevator or autopilot pitch; Lockheed1049 : Decrease elevator or autopilot pitch or move floating view aft; 747-200 : Decrease elevator or move floating view aft
PageUp	(360)	Increase throttle or autopilot autothrottle; SHIFT : Look front right; ufo : Increase throttle or autopilot autothrottle SHIFT : Look front right; Concorde : Increase throttle or autopilot autothrottle or move floating view up; 747-200 Lockheed1049 : Increase throttle or move floating view up
PageDown	(361)	Decrease throttle or autopilot autothrottle; SHIFT : Look back right; ufo : Decrease throttle or autopilot autothrottle SHIFT : Look back right; Concorde : Decrease throttle or autopilot autothrottle or move floating view down; 747-200 Lockheed1049 : Decrease throttle or move floating view down
Home	(362)	Increase elevator trim; SHIFT : Look front left; Boeing314A h4-hercules-jsbsim h4-hercules-yasim : Increase elevator trim or autopilot pitch (slow); Lockheed1049 : Increase elevator trim or autopilot pitch (slow) or move floating view front (fast); 747-200 Concorde : Increase elevator trim or move floating view front (fast)
End	(363)	Decrease elevator trim; SHIFT : Look back left; Boeing314A h4-hercules-jsbsim h4-hercules-yasim : Decrease elevator trim or autopilot pitch (slow); Lockheed1049 : Decrease elevator trim or autopilot pitch (slow) or move floating view aft (fast); 747-200 Concorde : Decrease elevator trim or move floating view aft (fast)
Insert	(364)	Move rudder left

Referenced but missing files:

\$FG_ROOT/Aircraft/c172r/c172r-base.xml