

# FlightGear Keyboard Bindings

Ctrl-A	(1) Toggle autopilot altitude lock
Ctrl-B	(2) Toggle speedbrake; <b>hunter seahawk</b> : Toggle speedbrake; <b>p51d</b> : Toggle engine boost; <b>Concorde</b> : Toggle afterburner
Ctrl-C	(3) Toggle clickable panel hotspots
Ctrl-D	(4) <b>spitfire</b> : Door fold toggle
Ctrl-E	(5)
Ctrl-F	(6) <b>hunter seahawk</b> : Emergency flap lowering
Ctrl-G	(7) Toggle autopilot glide slope lock
Ctrl-H	(8) Toggle autopilot heading lock
Ctrl-I/Tab	(9) Show instrument setting dialog
Ctrl-J	(10) <b>hunter-2tanks</b> : Jettison inner and outer pylon stores
Ctrl-K	(11)
Ctrl-L	(12) <b>hunter seahawk</b> : Seat default; <b>Concorde</b> : Disable autopilot
Ctrl-M/Enter	(13) Move rudder right
Ctrl-N	(14) Toggle autopilot nav1 lock
Ctrl-O	(15)
Ctrl-P	(16) Toggle pitch hold
Ctrl-Q	(17)
Ctrl-R	(18) Show radio setting dialog
Ctrl-S	(19) Toggle auto-throttle lock
Ctrl-T	(20) Toggle autopilot terrain lock
Ctrl-U	(21) [Cheat] Add 1000 ft of emergency altitude
Ctrl-V	(22) Select initial view (view 0; pilot view)
Ctrl-W	(23) Toggle autopilot wing leveler
Ctrl-X	(24) Reset zoom to default
Ctrl-Y	(25)
Ctrl-Z	(26)
Esc	(27) Prompt and quit FlightGear <b>SHIFT</b> : Reset FlightGear
Ctrl-4/Ctrl-\	(28)
Ctrl-5/Ctrl-]	(29)
Ctrl-6	(30)
Ctrl-7/Ctrl-/	(31)
Space	(32) Fire starter on selected engine(s); <b>spitfire</b> : Coffman starter
!	(33) Select first engine
"	(34)
#	(35) Select third engine
\$	(36) Select fourth engine
%	(37)
&	(38)
' (Apostrophe)	(39) Display a dialog relevant to the tuned in ATC service (if any)
(	(40) <b>spitfire</b> : Toggle left fuel cock
)	(41) <b>spitfire</b> : Toggle right fuel cock
*	(42)
+	(43)
, (Comma)	(44) Left brake
- (Minus)	(45)
. (Period)	(46) Right brake
/	(47)
0	(48) Move rudder left
1	(49) Decrease elevator trim <b>SHIFT</b> : Look back left

2	(50) Increase elevator or autopilot altitude <b>SHIFT: Look back</b>
3	(51) Decrease throttle or autopilot autothrottle <b>SHIFT: Look back right</b>
4	(52) Move aileron left (or adjust AP heading) <b>SHIFT: Look left</b>
5	(53) Center aileron, elevator, and rudder
6	(54) Move aileron right (or adjust AP heading) <b>SHIFT: Look right</b>
7	(55) Increase elevator trim <b>SHIFT: Look front left</b>
8	(56) Decrease elevator or autopilot altitude <b>SHIFT: Look forward</b>
9	(57) Increase throttle or autopilot autothrottle <b>SHIFT: Look front right</b>
: (Colon)	(58)
; (Semicolon)	(59)
<	(60) <b>spitfire:</b> Rudder trim left
=	(61)
>	(62) <b>spitfire:</b> Rudder trim right
?	(63)
@	(64) Select second engine
A	(65) Decrease speed-up
B	(66) Toggle parking brake on or off
C	(67) <b>bo105:</b> Toggle doors; <b>spitfire:</b> Coffman starter cartridge indexer
D	(68) <b>spitfire:</b> Door fold down
E	(69)
F	(70) <b>hunter seahawk:</b> Wing fold down; <b>spitfire:</b> Open canopy
G	(71) Gear down
H	(72) Cycle HUD brightness; <b>hunter seahawk:</b> Hook down; <b>spitfire:</b> Radiator flap down
I	(73) Minimal HUD
J	(74) <b>hunter-2tanks:</b> Jettison outer pylon stores
K	(75) <b>spitfire:</b> Toggle gear warning
L	(76) <b>hunter seahawk:</b> Seat down
M	(77) Decrease warp; <b>spitfire:</b> Mixture weak
N	(78) <b>spitfire:</b> Propeller course
O	(79) <b>spitfire:</b> Operate priming pump
P	(80) Toggle panel
Q	(81) <b>T38:</b> Fuel cutoff switch or lever
R	(82) <b>fokker100:</b> Toggle thrust reverser; <b>A320 MD11:</b> Toggle cutoff on selected engine(s)
S	(83) <b>A320 MD11:</b> Fire starter on selected engine(s)
T	(84) Decrease warp delta
U	(85)
V	(86) Scroll in reverse through views
W	(87) (Temporary) Toggle fullscreen for 3DFX only
X	(88) Increase field of view
Y	(89)
Z	(90) Decrease Visibility
[	(91) Decrease flaps; <b>737 hunter seahawk:</b> Decrease flaps; <b>ComperSwift:</b> Adjust view left; <b>B-52F:</b> –
\	(92)
]	(93) Increase flaps; <b>737 hunter seahawk:</b> Increase flaps; <b>ComperSwift:</b> Adjust view right; <b>B-52F:</b> –
^	(94)
_ (Underscore)	(95)
` (Backtick)	(96)
a	(97) Increase speed-up
b	(98) Apply all brakes

c	(99)	Toggle 3D/2D cockpit
d	(100)	<b>AN-225 YF-23 A-10:</b> Retract slats; <b>spitfire:</b> Door fold up
e	(101)	
f	(102)	<b>AN-225 YF-23 A-10:</b> Extend slats; <b>hunter seahawk:</b> Wing fold up; <b>spitfire:</b> Close canopy
g	(103)	Gear Up
h	(104)	HUD master switch (cycle green/red/off); <b>hunter seahawk:</b> Hook up; <b>spitfire:</b> Radiator flap up
i	(105)	Normal HUD
j	(106)	Decrease spoilers; <b>hunter-2tanks:</b> Jettison inner pylon stores
k	(107)	Increase spoilers; <b>hunter seahawk:</b> Null; <b>spitfire:</b> Toggle gear warning
l	(108)	Toggle tail-wheel lock; <b>hunter seahawk:</b> Seat up; <b>spitfire:</b> Dump fuel
m	(109)	Increase warp; <b>spitfire:</b> Mixture rich
n	(110)	<b>spitfire:</b> Propeller fine
o	(111)	
p	(112)	Toggle the pause state of the sim
q	(113)	
r	(114)	Activate the instant replay system
s	(115)	Swap panels
t	(116)	Increase warp delta
u	(117)	
v	(118)	Cycle view
w	(119)	
x	(120)	Decrease field of view
y	(121)	
z	(122)	Increase Visibility
{	(123)	Decrease magneto on selected engine; <b>bo105:</b> Start engines/rotor; <b>spitfire:</b> Toggle left magneto switch
	(124)	
}	(125)	Increase magneto on selected engine; <b>bo105:</b> Stop rotor/engines; <b>spitfire:</b> Toggle right magneto switch
~	(126)	Select all engines
Ctrl-8	(127)	
F1	(257)	<b>SHIFT: Load flight</b>
F2	(258)	Force tile cache reload <b>SHIFT: Save flight</b>
F3	(259)	Capture screen <b>SHIFT: Load panel</b>
F4	(260)	Force lighting update <b>SHIFT: Reload global preferences</b>
F5	(261)	<b>SHIFT: Scroll panel down</b>
F6	(262)	Toggle autopilot heading mode <b>SHIFT: Scroll panel up</b>
F7	(263)	<b>SHIFT: Scroll panel left</b>
F8	(264)	Cycle fog type <b>SHIFT: Scroll panel right</b>
F9	(265)	Toggle textures
F10	(266)	Toggle menubar <b>SHIFT: Toggle FDM data logging</b>
F11	(267)	Pop up autopilot dialog
F12	(268)	
Enter	(269)	Move rudder right
Keypad 5	(309)	Center aileron, elevator, and rudder
Left	(356)	Move aileron left (or adjust AP heading) <b>SHIFT: Look left</b>

Up	(357)	Increase elevator or autopilot altitude SHIFT: Look forward
Right	(358)	Move aileron right (or adjust AP heading) SHIFT: Look right
Down	(359)	Decrease elevator or autopilot altitude SHIFT: Look backwards
PageUp	(360)	Increase throttle or autopilot autothrottle SHIFT: Look front right; <b>bo105</b> : Increase collective
PageDown	(361)	Decrease throttle or autopilot autothrottle SHIFT: Look back right; <b>bo105</b> : Lower collective
Home	(362)	Increase elevator trim SHIFT: Look front left
End	(363)	Decrease elevator trim SHIFT: Look back left
Insert	(364)	Move rudder left